



# First 30 minutes

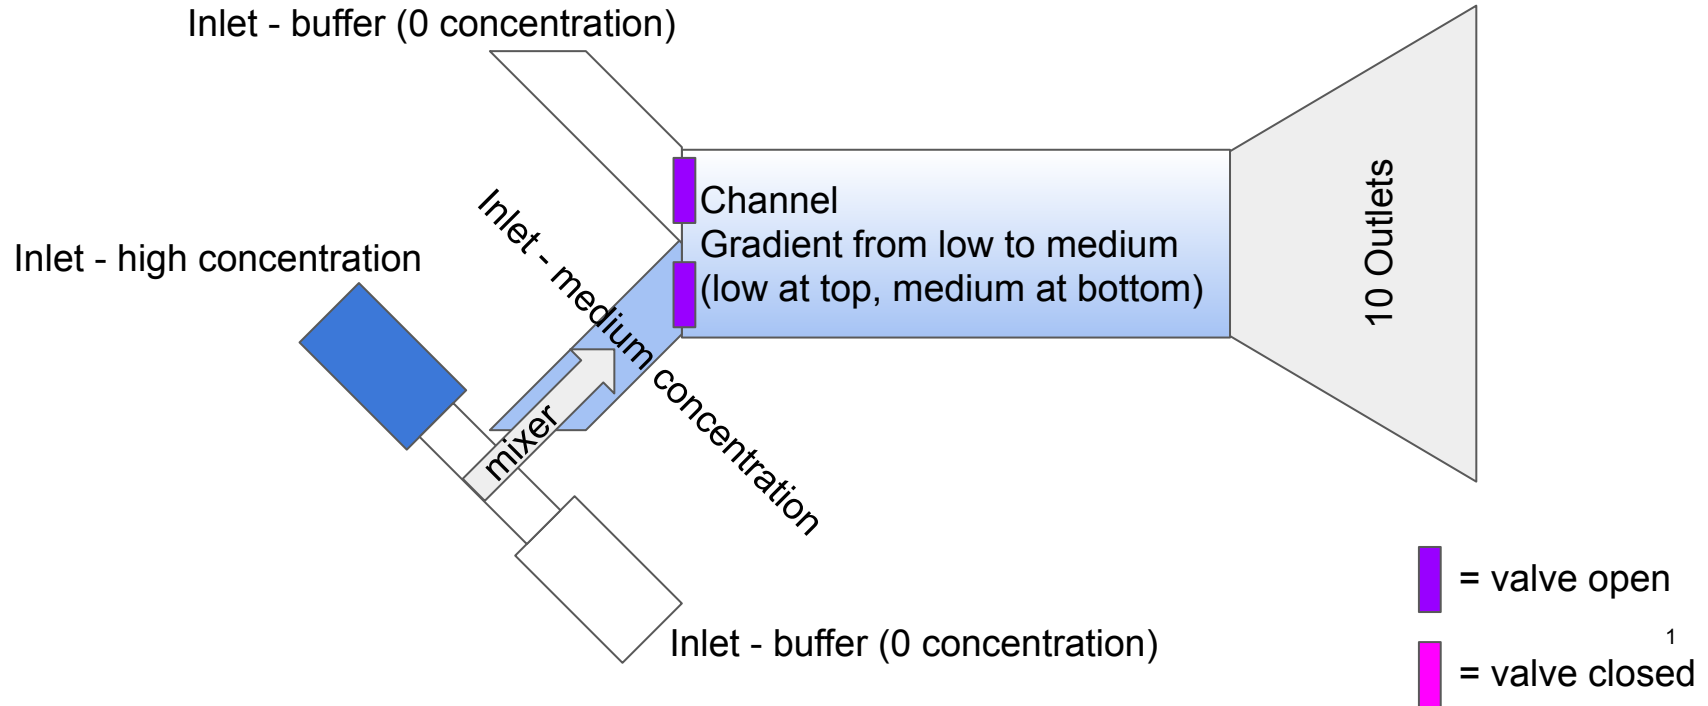


# Rinsing out with buffer

After gradient of zero is reached, both valves are closed and the top inlet is replaced to have a high concentration instead of a zero concentration

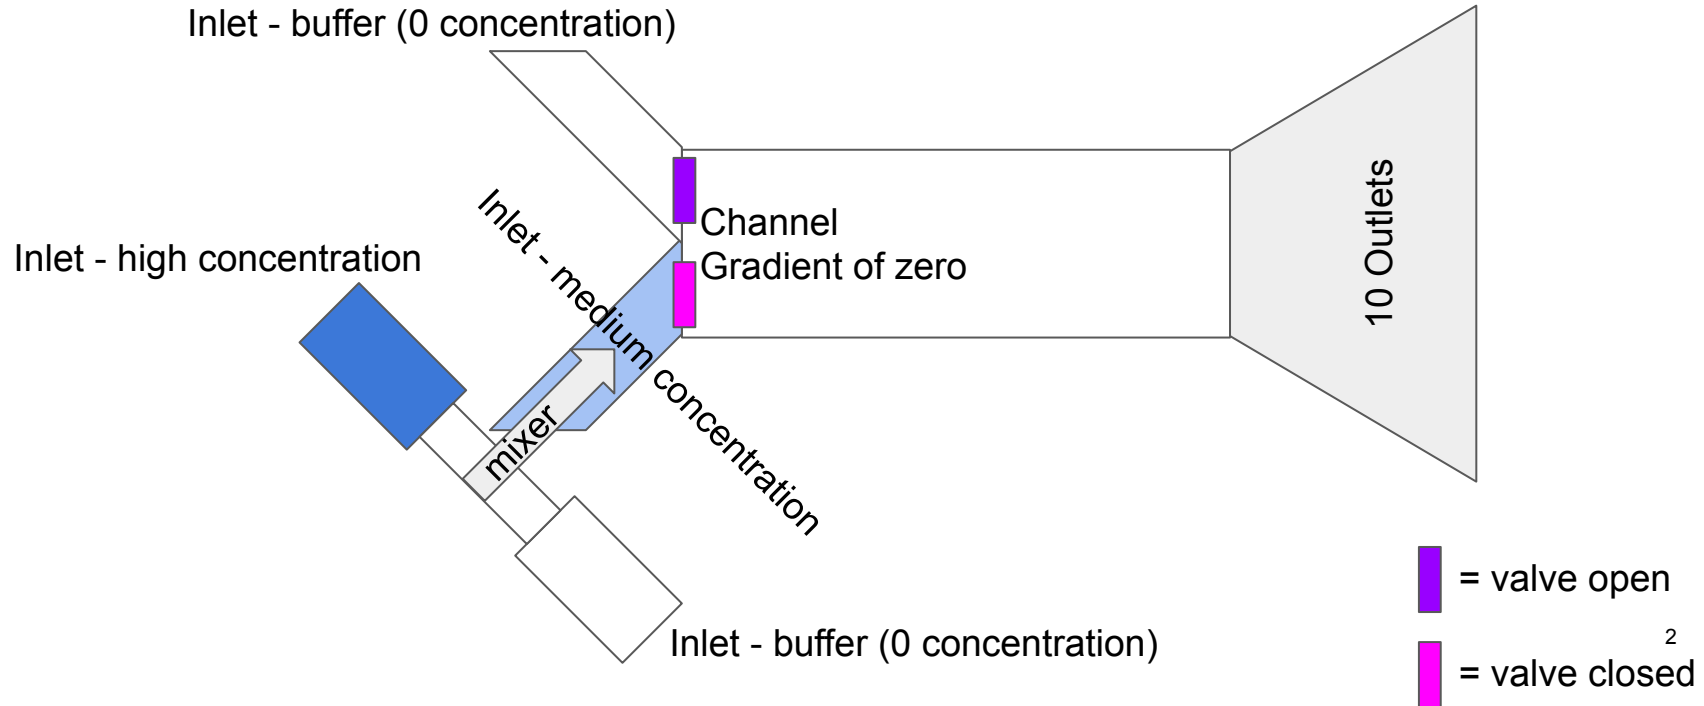

# Last 30 minutes

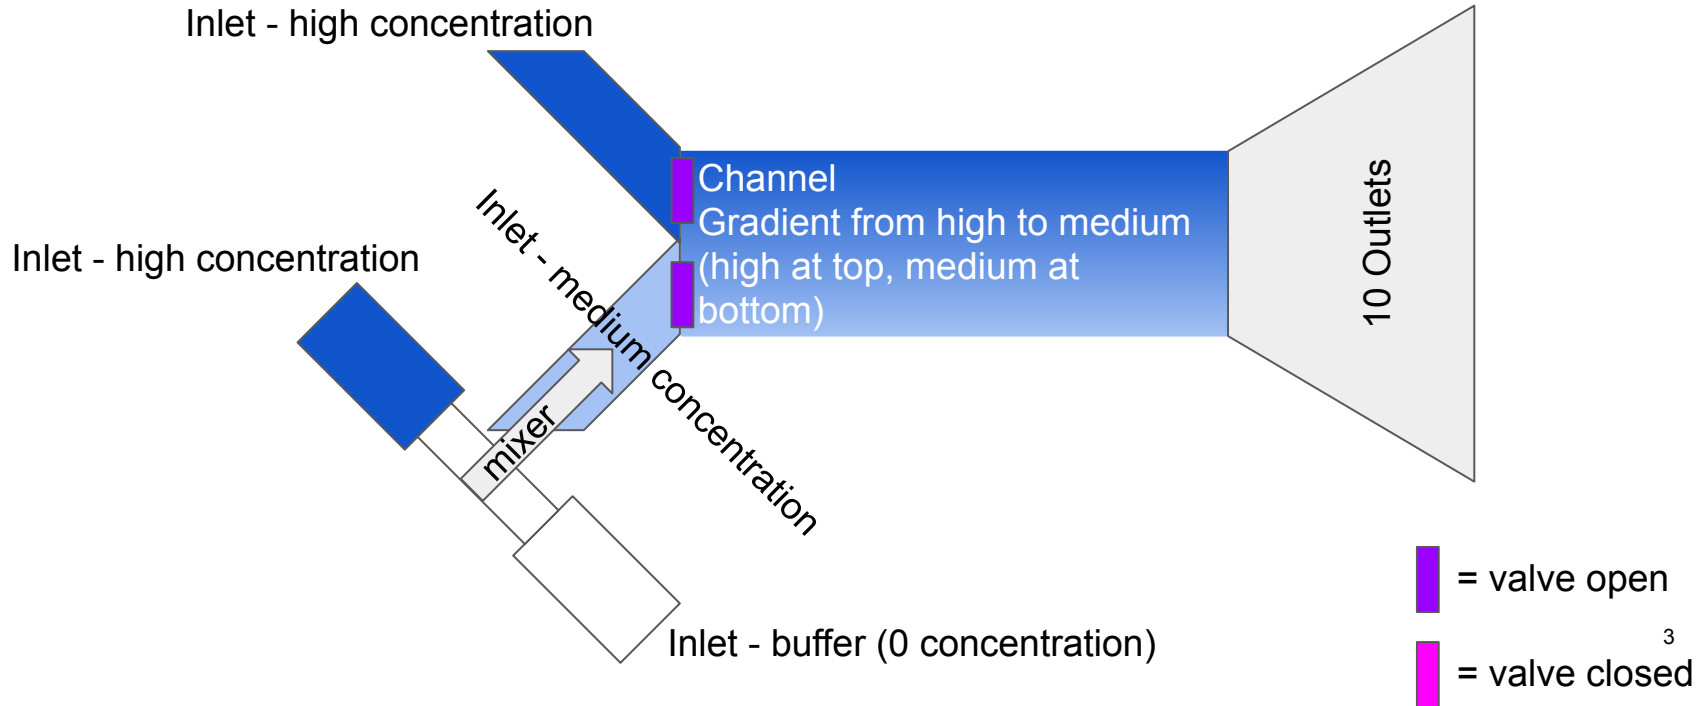

MIT OpenCourseWare  
<https://ocw.mit.edu/>

SP.248 NEET Ways of Thinking  
Fall 2025

For information about citing these materials or our Terms of Use, visit: <https://ocw.mit.edu/terms>.