

Moment of inertia of beam cross section

Reading:

Instructor: Raúl Radovitzky

Teaching Assistants: Grégoire Chomette

Massachusetts Institute of Technology
Department of Aeronautics & Astronautics


Outline:

- 1 Moment of inertia of beam cross section

Moment of inertia of beam cross section I:

Geometric properties of 2D figures

- First moment of area:
Center of area
- Second moment of area
- Parallel axis theorem

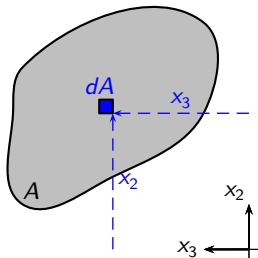

First moment of area Given an area A of any shape in the x_2 - x_3 plane (as is the case for the cross section of a beam), the first moments of area with respect to the two axes are given respectively by:

$$Q_2 = \int_A x_3 dA \quad Q_3 = \int_A x_2 dA$$

Moment of inertia of beam cross section II:

They are a measure of the distribution of the area of the shape with respect to the given axes. The dimension of the moment of area is $[L^3]$, the SI units are m^3 . **Center of area** or **geometric center** is defined as the location (x_2^G, x_3^G) such that:

$$Q_2 = \int_A x_3 dA = x_3^G A, \quad Q_3 = \int_A x_2 dA = x_2^G A$$

i.e.

$x_3^G = \frac{Q_2}{A} = \frac{\int_A x_3 dA}{A}$	$x_2^G = \frac{Q_3}{A} = \frac{\int_A x_2 dA}{A}$
---	---

Remarks

- Clearly if the axes are located on (x_2^G, x_3^G) the moments of area are zero, i.e.

$$Q_2^G = 0, \quad Q_3^G = 0$$

- Any axis of symmetry of a 2D shape must pass through its **Center of area**

Moment of inertia of beam cross section III:

For the remainder of the class, we will work with beam cross sections which have at least two orthogonal axes of symmetry.

Moment of Inertia or Second moment of area Given an area A of any shape in the x_2 - x_3 plane (as is the case for the cross section of a beam), the second moments of area with respect to the two axes are given respectively by:

$$I_{22} = \int_A x_3^2 dA \quad I_{33} = \int_A x_2^2 dA$$

They are another (but different) measure of the distribution of the area of the shape with respect to the given axes. The dimension of the moment of inertia is $[L^4]$, its SI units are m^4 .

Remarks

Moment of inertia of beam cross section IV:

- As we saw in beam theory, the moment of inertia defines the geometric stiffness of a beam to bending loads. In Unified, we only consider bending in the plane x_1 - x_2 where the beam stiffness is given by

$$I = I_{33} = \int_A x_2^2 dA$$

- Due to the symmetry of the stress distribution under pure bending loads (no net normal force), and the fact that we only consider homogeneous materials (bending of composites is discussed in 16.20), the distance x_2 in the expression above is the distance to the **center of area**, i.e. the **neutral axis** (the beam fibers with zero stress) is on the geometric center of the cross section.

Moment of inertia of beam cross section V:

Example

Moment of inertia of a circle of radius R with respect to centroidal axis

$$I = \int_A x_3^2 dA = \int_A (r \sin \theta)^2 dA = \int_0^{2\pi} \int_0^R (r \sin \theta)^2 (r dr d\theta) = \int_0^{2\pi} (\sin \theta)^2 \left(\int_0^R r^3 dr \right) d\theta = \frac{\pi}{4} R^4 \quad (1)$$

Theorem

Parallel axis theorem Given the moment of inertia $I_{33}^G = I^G$ with respect to the centroidal axis x_3 (i.e. the axis passing through its geometric center), the moment of inertia $I_{33} = I$ with respect to an axis x_3 separated from the original by a distance d_2 is:

$$I = I^G + Ad_2^2$$

Moment of inertia of beam cross section VI:

Proof.

$$\begin{aligned} I_{33} &= \int_A x_2^2 dA = \int_A (x_2^G + d_2)^2 dA = \int_A (x_2^G)^2 dA + 2d_2 \underbrace{\int_A x_2^G dA}_0 + \underbrace{\int_A d_2^2 dA}_{d_2^2 A} \\ &= I + Ad_2^2 \quad (2) \end{aligned}$$

q.e.d.



This is very useful for computing the moments of inertia of beams with I, T, L shapes, etc.

MIT OpenCourseWare
<https://ocw.mit.edu/>

16.001 Unified Engineering: Materials and Structures
Fall 2021

For information about citing these materials or our Terms of Use, visit: <https://ocw.mit.edu/terms>.